


1. ENSURE WHEEL IS CLEAN AND FREE FROM ANY DEBRIS LEFT OVER FROM THE MACHINING PROCESS.



2. TRIM PHOTO ETCH INSERTS FROM THEIR SPRUE

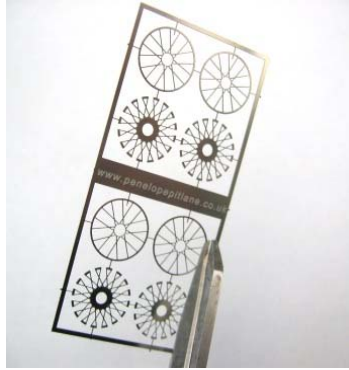

3. INSERT A SPARE AXLE THROUGH WHEEL



4. DROP ONE OF THE REAR PHOTO ETCH PIECES (WITHOUT OUTER RING) ONTO AXLE



5. USING A SPARE PIECE OF 1/8" TUBE PUSH THE CENTRE OF THE PHOTO-ETCH TO THE BACK FACE OF THE WHEEL TO FORM A CONE SHAPE.



6. DROP ON THE FRONT PHOTO-ETCH PIECE ONTO AXLE.



7. MAKE SURE EDGES ARE AGAINST RIM OF WHEEL ALL ROUND



8. USING TWEEZERS INSERT WHITE METAL KNOCK OFF



9. RUN A BEAD OF WHITE GLUE AROUND OUTER EDGE AND KNOCK OFF AND ALLOW TO DRY.

10. WHEELS ARE NOW READY TO FIT TO A TRRC KIT OF YOUR CHOICE!

